

- ÷ If you are installing a Hamburger's oil pan on an operating engine, remove all old gasket material from the cylinder block's side rails, making certain no residue is left in the tapped bolt-holes in the block. For best installation results, run a bottoming tap into each threaded hole and clean out with compressed air. Also, remove the rear main bearing pan seal and pan seal located in the timing gear cover. Clean away any residual gasket cement.
- Ņ properly deaned and prepared for new gaskets and seals If installing a Hamburger's oil pan on an engine being built, make certain all appropriate gasket surfaces (as outlined above) are
- ω the pickup to provide correct alignment with the oil pan floor.

 NOTE: It is strongly recommended that you tack-weld the pickup tube to the pump housing, to prevent pump/tube separation during severe use or vibration. illustration). In rare cases, it may be necessary to adjust install the Hamburger's oil pump pickup in oil pump housing. pickup is parallel to the floor of the oil pan (see Trial-fit the pump into the engine to check if the base of the pump

POSITIONING OF THE OIL PUMP PICKUP (SCREEN) IN THE SUMP IS CRUCIAL TO PROPER OIL DELIVERY! FOLLOW CAREFULLY!

۶ clearance for all components (oil pump pickup, pan baffles etc.). If no adjustments are required, remove the oil pan and permanently install oil pump. Measure the distance between the oil pump pickup screen and the pan floor. It MUST be between 1/4" - 3/8" with the Hamburger's oil pa seals in place, trial-fit the oil pan to make certain there oil pump temporarily installed and no gaskets

> Keep oil pump pickup screen parallel with floor of oil pan and positioned 1/4" to 3/8" from the bottom of the pan.

> > Plakup Sareer Oil Pump

Pickup Tube

Oll Pump

OI Pan L

MUST be between 1/4° - 3/8" with the Hamburger's oil pan gasket installed. If you are using a high volume pump, you may need to modify the pickup. For #3080 and #3090 Ford oil pans, see instruction sheet supplement.

Using some form of gasket cement, position and glue side rail gaskets to the cylinder block. Make certain all appropriate bolt holes between the block and gaskets are properly aligned.

Çħ

- below to ensure correct gasket usage. oll leaks may also occur. Use of a non Hamburger's pan gasket will vold your Hamburger's oll pan Warranty. See gasket chart **NOTE**: Only use Genuine Hamburger's oil pan gasket sets! The use of other gaskets, such as 1 piece or extra thick, will cause major engine damage due to oil pressure loss caused by the increased distance between pickup and pan floor. Pan warping an Pan warping and
- 90 Install the oil pan seals in the rear main bearing cap and timing gear cover. The siderall gaskets and end seals overlap and must be trimmed to ensure a proper, leak-free seal. <u>Trim the siderall gaskets</u> so they but up against the rubber end seals and do not overlap. **NOTE**: We recommend the use of an RTV or "room temperature vulcanizing" gasket sealer between the end seals and grooves into which the seals are seated
- 7 area where the side rail gaskets and end seals join, ensuring there are no gaps Apply a thin coat of RTV (type gasket sealer) to the oil pan side of the siderali gaskets and end seals. Pay special attention to the
- œ Position pan onto the side rails and over end seals. Install all oil pan bolts, making certain that all bolts can be started before tightening all fasteners. Tighten fasteners to 12-ft. lbs. by working from the center of the pan rails out toward the end seals. DO NOT OVERTIGHTEN THE FASTENERS! IMPORTANT NOTE- Due to this pan's notched sideralls, it is highly recommended that spreader bars (not included) are used along with the bolts included with this pan.
- 9 pan installation. Re-install any dipstick holders, dipsticks, temperature sending bulbs and all other components previously removed during this
- ₽ Start the engine and bring it up to operating temperature. Turn off engine and allow it to cool. Re-torque all fasteners compensate for gasket compression during first heat cycle. **Do not over-tighten oil pan fasteners!** Overtightening fasteners produces excessive gasket compression in the area of the fastener, and will lead to future oil leaks. of oil pan

HAMBURGER'S OIL PAN GASKET SETS (For use with Hamburger's Oil Pans only)

PART#	DESCRIPTION	PART#	
3001	1088 & 3047 Hamburger	3007	Fits 0218
3002	Fits 1078 & 3037 Hamburger Oil Pans	4340	Fits 0168
3003	1098 & 3057 Hamburger	4341	Fits 0428
3004	1488 & 1498 Hamburger	4342	Fits 3080
3005	3054 & 3064 Hamburger	4347	Fits 0777
3006	3044 & 3074 Hamburger	9164	Fits 0170

8, 0178 & 0238 Hamburger & 3090 Hamburger Oil Pans Hamburger Oil Pans & 0198 Hamburger Oil Pans Hamburger Oil Pans Hamburger Oil Pans DESCRIPTION <u><u>ò</u></u> Pans

website: 12438 Putnam Street • Whittier, CA 90602 tel (562) 921-0404 • www.hamburgersperformance.com • email: techsupport@tdperformance.com fax (562) 921-7515