



PART # 88420, 88426 & 88842
INSTRUCTION SHEET
260-351W ENGINES FORD STREET ROD

CAUTION!

This is a custom designed exhaust header system, designed for this particular application (s). Do not bend, bang, cut, dent, drill or heat any portion of this header! Any alteration other than those suggested in this instruction sheet will void the Hedman Lifetime Guarantee!

To prevent leaks, install your headers using Hedman Hedders exhaust gaskets ONLY and a spray copper gasket sealant.

BEFORE STARTING INSTALLATION:

It is necessary to raise the vehicle at least 36 inches from the ground. A floor hoist is recommended, if not available, use a hydraulic floor jack with jack stands. **DO NOT USE A BUMPER JACK!**

PRE-INSTALLATION:

1. Disconnect battery and remove all spark plugs (Number Wires).
2. Remove oil dip stick and dip stick tube.
3. Remove stock cast iron exhaust manifolds (Right & Left).
4. Remove exhaust system and remove from area if necessary.

INSTALLATION INSTRUCTIONS:

1. With gaskets in place, install both the right and left side headers. Starting from the center out tighten all header bolts.
2. With headers secured check starter wires, brake and fuel lines for sufficient clearance!
3. With reducers supplied attach to headers and connect existing exhaust if available, or carefully design a new exhaust system for model or street rod.
4. Replace spark plugs and plug wiring, dipstick tube, dipstick and reconnect battery.
5. If headers have HTC coating be sure to follow-in procedure.
6. Start engine, test drive vehicle, allowing engine to gain normal operating temperature. Check for leaks and new or unusual noises. After test drive, re-tighten all header bolts.


ENJOY YOUR HEADERS WHILE COMBINING INCREASED FUEL ECONOMY WITH BETTER PERFORMANCE.

SPECIAL INSTRUCTIONS!

After installing your headers it is very important that your exhaust system be suspended properly. As indicated in the drawing below you must place hangers as close to the header collector as possible. Rubber hangers should be used to allow the front of the system to flex with the engine torque. A hanger is needed before and after the muffler (s). When your exhaust system is unbolted from the header collector, it should remain suspended all by itself. Your Headers Are Not designed to support your exhaust system. Failure to follow these instructions will most likely result in cracks around the area where your primary tubes and collector are welded together, and will nullify your "Lifetime Guarantee".

DO NOT WRAP YOUR NEW HEADERS!

The use of thermal wraps will drastically shorten the life of your Headers, and will void the Hedman "Lifetime Guarantee".

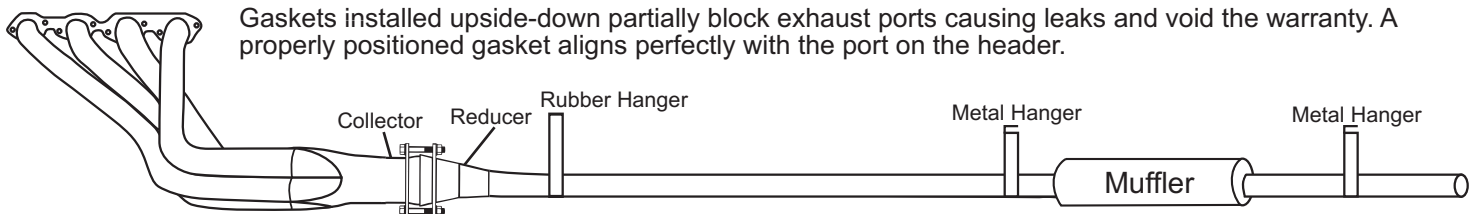

WARNING: Removal of catalytic converters and other factory air pollution control devices is illegal. We recommend you adhere to your state's local laws. Our testing indicates performance is not significantly affected by these devices.

12438 Putnam Street • Whittier, CA 90602 • tel (562) 921-0404 • fax (562) 921-7515
website: www.hedman.com • email: techsupport@hedman.com

88420-instructionsheet-051605.cdr