



**#2515 TORQUE-CURVE  
MPFI SPACER KIT**  
**#2615 WIDE OPEN  
MPFI SPACER KIT**  
**#2715 SMOOTH BORE  
MPFI SPACER KIT**

**FITS:**  
1994-01 DODGE RAM 3.9, 5.2 & 5.9L  
1994-03 DODGE RAM 5.9L

## INSTALLATION INSTRUCTIONS

Important! Read all instructions before you begin installation.


### THIS KIT CONTAINS

1 - Trans-Dapt Perf. Spacer	4 - 5/16"-18 X 3 1/4" Bolts
2 - Gaskets	4 - 5/16" Lock Washers
1 - Air Cleaner Spacer Tube	

### TOOL LIST

1/2" Socket  
Standard Screwdriver

1. Disconnect negative (-) Battery Cable.
2. Remove Air Cleaner assembly
3. Using 1/2" socket, remove (4) 5/16" bolts attaching the throttle body to the manifold.
4. Remove throttle body intake assembly using a 1/2" socket.
5. Lift the Throttle body.
6. Remove gasket and clean surfaces.
7. Install the Trans-Dapt Spacer with two gaskets (**Ref A**).
  - A. Place one gasket between the throttle body (**Ref B**) and Trans-Dapt Spacer (**Ref A**).
  - B. Place second gasket between the Trans-Dapt Spacer and manifold.
8. Install the four 5/16"-18 X 3-1/4" Bolts and four 5/16" Lock washers provided in this kit (**Ref D**), using **Step 3** as an example.
9. Inspect & Test throttle linkage for full Open & Closed travel before driving. (Some cruise or kickdown cables may require adjustment. Please refer to your vehicles service manual for proper adjusting.)
10. Install spacer on the air cleaner support bracket (**Ref "C"**). Use **Step 2** as an example.
11. Reconnect battery cable.

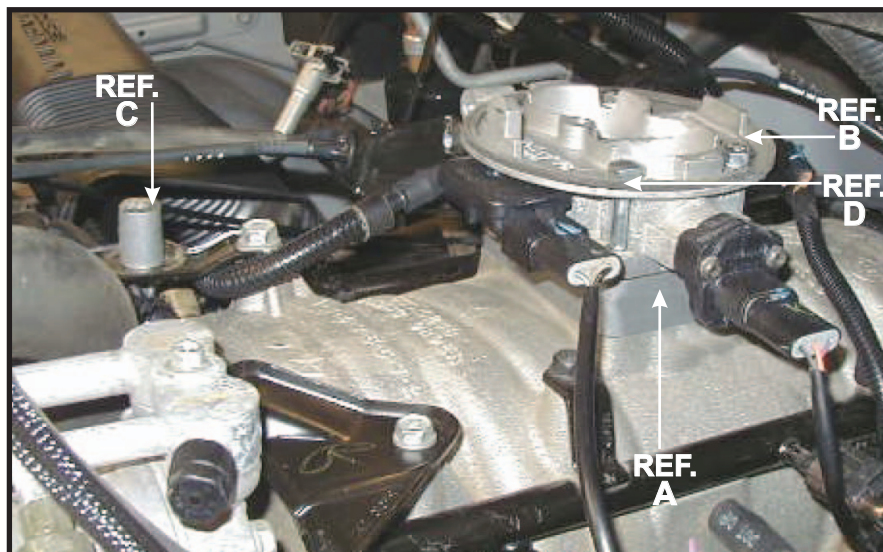

**Ref. A-** (1) Trans-Dapt Spacer (2) Gaskets  
**Ref. B-** Throttle Body

**Ref. C-** (1) 1" Long Spacer  
**Ref. D-** (4) 5/16" -18 X 3 1/4" Bolts

12438 Putnam Street • Whittier, CA 90602 tel (562) 921-0404 • fax (562) 921-7515  
website: [www.hedman.com](http://www.hedman.com) • email: [techsupport@hedman.com](mailto:techsupport@hedman.com)