



**PART #2565 TORQUE CURVE  
MPFI SPACER KIT**

**PART #2765 SMOOTH BORE  
MPFI SPACER KIT**

1996-00 GM trucks & SUVs  
with 5.0L & 5.7L Vortec

## INSTALLATION INSTRUCTIONS


### THIS KIT CONTAINS

- |                             |                               |
|-----------------------------|-------------------------------|
| 1 - Trans-Dapt Perf. Spacer | 1 - 6mm x 3½" Stud (For Rear) |
| 3 - 6mm x 60mm Bolts        | 1 - 6mm Nut                   |
| 3 - 6mm Flat Washers        | 1 - Spacer Tube               |


### TOOL LIST

- Flat Head Screwdriver
- 10mm Wrench
- 10mm Socket

1. Disconnect negative (-) Battery Cable
2. Remove air cleaner housing from throttle body unit.
3. Using 10mm socket remove two nuts from front side of throttle body. **(Ref. C)**
4. Remove air cleaner housing riser and (1) studnut from back side of throttle body. **(Ref. A)**
5. Lift throttle body and clean gasket surfaces.
6. Reinstall throttle body **(Ref. B)**, spacer, and gasket **(Ref. E)**. Be sure to install the gasket between the throttle body and the spacer only, reuse the rubber seal on the intake manifold.
7. Remove throttle linkage bracket and studnut.
8. Install Throttle body spacer tube under throttle linkage bracket. **(Ref. D)**
9. **Inspect** and **test** throttle linkage for full **open** & **closed** travel **before** driving. Some cruise or kickdown cables may require adjustment. Refer to service manual.
10. Reinstall air cleaner housing. **(Refer to Step No. 2)**
11. Re-connect negative (-) Battery Cable.

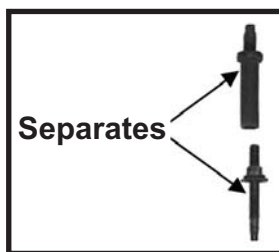

**Ref. A-** 6mm x 3½ Stud, 6mm Flat Washer, 6mm Nut  
**Ref. B-** Throttle Body  
**Ref. C-** 6mm x 60 (2) Bolt, 6mm Flat Washers

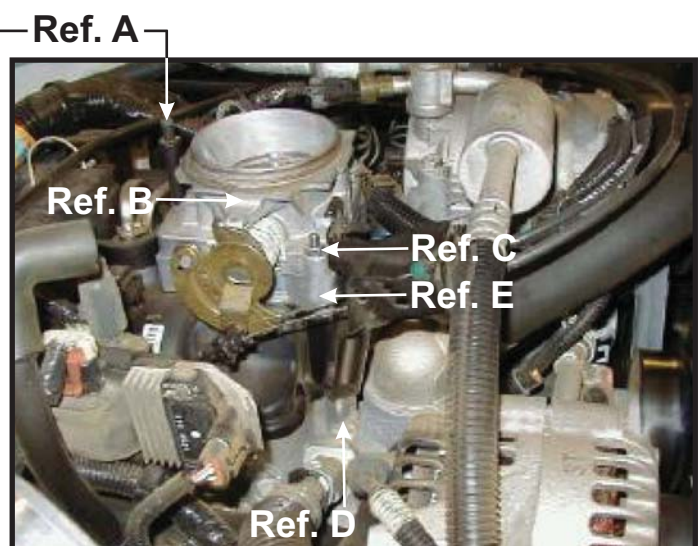

**Ref. D-** Throttle Spacer 6mm x 60 Bolt & 6mm Flat Washer  
**Ref. E-** Throttle Body Spacer and Gasket