



**PART # 88220 & 88226  
INSTRUCTION SHEET  
351 FORD MUSTANG  
CLEVELAND HEADS**

**CAUTION!** This is a custom designed exhaust header system, designed for this particular application (s). Do not bend, bang, cut, dent, drill or heat any portion of this header! Any alteration other than those suggested in this instruction sheet will void the Hedman Lifetime Guarantee!  
To prevent leaks, install your headers using Hedman Hedderts exhaust gaskets ONLY and a spray copper gasket sealant.

**BEFORE STARTING INSTALLATION:**

It is necessary to raise the vehicle at least 36 inches from the ground. A floor hoist is recommended, if not available, use a hydraulic floor jack with jack stands. **DO NOT USE A BUMPER JACK!**

**INSTALLATION INSTRUCTIONS:**

**Note:** Disconnect battery and remove all spark plugs and covers (Number Wires).

**Left Side:**

1. Remove: **A.** Clutch cross shaft from bottom of engine compartment area. **B.** Exhaust manifolds.
2. With gasket in place, work header through bottom of engine compartment area to proper location.
3. Start all header bolts. After all bolts are started, tighten all bolts evenly.
4. Replace clutch cross shaft.

**Right Side:**

1. Remove exhaust manifold.
2. With gasket in place, work header through bottom of engine compartment area to proper location.
3. Start all header bolts. After all bolts are started, tighten all bolts evenly.
4. Make sure all cables, lines and wires have sufficient clearance.
5. Replace spark plugs, spark plug wires and re-connect battery.
6. Install street hook-up to collectors, cut stock exhaust system to length and weld.
7. Start engine, test drive vehicle, allowing engine to gain normal operating temperature. Check for leaks and new or unusual noises. After test drive, re-tighten all header bolts.


**ENJOY YOUR HEADERS WHILE COMBINING INCREASED FUEL ECONOMY WITH BETTER PERFORMANCE.**

**SPECIAL INSTRUCTIONS!**

After installing your headers it is very important that your exhaust system be suspended properly. As indicated in the drawing below you must place hangers as close to the header collector as possible. Rubber hangers should be used to allow the front of the system to flex with the engine torque. A hanger is needed before and after the muffler (s). When your exhaust system is unbolted from the header collector, it should remain suspended all by itself. Your Headers Are Not designed to support your exhaust system. Failure to follow these instructions will most likely result in cracks around the area where your primary tubes and collector are welded together, and will nullify your "Lifetime Guarantee".

**DO NOT WRAP YOUR NEW HEADERS!**

The use of thermal wraps will drastically shorten the life of your Headers, and will void the Hedman "Lifetime Guarantee".

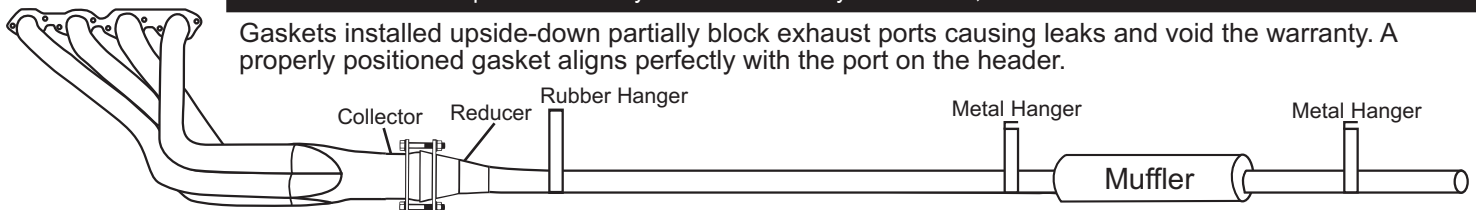

**WARNING:** Removal of catalytic converters and other factory air pollution control devices is illegal. We recommend you adhere to your state's local laws. Our testing indicates performance is not significantly affected by these devices.