



**PART # 88400, 88406 & 88408  
INSTRUCTION SHEET  
260-302 SHORTY**

\*See Catalog for application listings.\*

**CAUTION!**

This is a custom designed exhaust header system, designed for this particular application (s). Do not bend, bang, cut, dent, drill or heat any portion of this header! Any alteration other than those suggested in this instruction sheet will void the Hedman Lifetime Guarantee!

To prevent leaks, install your headers using Hedman Hedderts exhaust gaskets ONLY and a spray copper gasket sealant.

**BEFORE STARTING INSTALLATION:**

It is necessary to raise the vehicle at least 36 inches from the ground. A floor hoist is recommended, if not available, use a hydraulic floor jack with jack stands. **DO NOT USE A BUMPER JACK!**

**INSTALLATION INSTRUCTIONS:**

**NOTE:** Hedman recommends for your protection to wear safety glasses and gloves while installing hedderts.

1. Disconnect battery, remove stock exhaust manifolds, headpipes, spark plugs (Number Wires) and oil dip stick tube.
2. Install passenger side first. With gasket in place, install header from above and start all bolts. Do not tighten bolts at this time.
3. Install drivers side with gasket in place, install header from above and start all bolts. Check the clearance of all hoses, lines, and wiring. Re-install oil dipstick and tighten all header bolts evenly.
4. **Important:** On some models it will be necessary to remove shift lever to install system.
5. It will require cutting of stock exhaust and modification to reconnect exhaust system.
6. Make sure all wires, cables, and hoses have proper clearance.
7. Re-connect battery.
8. Start engine, test drive vehicle, allowing engine to gain normal operating temperature. Check for leaks and new or unusual noises. After test drive, re-tighten all header bolts.

**ENJOY YOUR HEADERS WHILE COMBINING INCREASED FUEL ECONOMY WITH BETTER PERFORMANCE.**


**SPECIAL INSTRUCTIONS!**

After installing your headers it is very important that your exhaust system be suspended properly. As indicated in the drawing below you must place hangers as close to the header collector as possible. Rubber hangers should be used to allow the front of the system to flex with the engine torque. A hanger is needed before and after the muffler (s). When your exhaust system is unbolted from the header collector, it should remain suspended all by itself. Your Headers Are Not designed to support your exhaust system. Failure to follow these instructions will most likely result in cracks around the area where your primary tubes and collector are welded together, and will nullify your "Lifetime Guarantee".

**DO NOT WRAP YOUR NEW HEADERS!**

The use of thermal wraps will drastically shorten the life of your Headers, and will void the Hedman "Lifetime Guarantee".

Gaskets installed upside-down partially block exhaust ports causing leaks and void the warranty. A properly positioned gasket aligns perfectly with the port on the header.

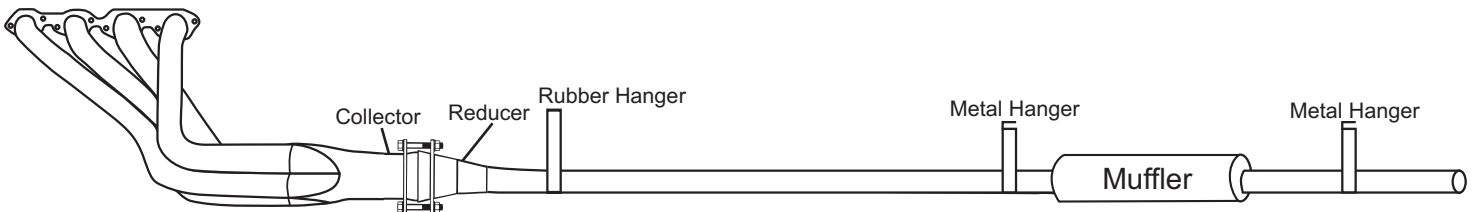

**WARNING:** Removal of catalytic converters and other factory air pollution control devices is illegal. We recommend you adhere to your state's local laws. Our testing indicates performance is not significantly affected by these devices.

12438 Putnam Street • Whittier, CA 90602 • tel (562) 921-0404 • fax (562) 921-7515  
website: [www.hedman.com](http://www.hedman.com) • email: [techsupport@hedman.com](mailto:techsupport@hedman.com)